



Hue Leben Dress

User Manual

※ Model : DHV-5PCCU

- Images and contents included in this manual may be subject to change without prior notice to improve product performance.
- Please familiarize yourself with the Safety Precautions before use.
- If you need installation service, please contact the Customer Center.
(If any problems occur due to installation by anyone other than an authorized professional technician, you may not be entitled to free repair service under the product warranty, even if the warranty period has not expired.)
- The product warranty is included in this user manual.



Please scan the QR code

Product Features

This built-in ceiling-mounted dehumidifier saves space and provides fresh air through its Dehumidify modes. The device automatically adjusts humidity to maintain optimal levels inside the dressing room and removes odors produced by various chemicals during dry cleaning.



Auto Dehumidification

The device automatically maintains comfortable humidity level of below 50%, helping keep the room pleasant 24/7 and enabling faster drying of damp clothes during rainy seasons.



Swing Operation

This device swings to supply dry air to every nook and cranny of the room and remove hidden pockets of humid air, making the dressing room more comfortable in a short time.



Filter System

The device's filter system is composed of a pre-filter, a deodorizing filter, and an optional UV sterilizing filter. It not only removes dust and odors from clothing but also sterilizes harmful germs.



Auto Drainage System

Water collected from the air is automatically drained through buried piping by an automatic drain pump, eliminating the need to empty a water bucket and improving user convenience.

Table of Contents

Precautions Before Use	Warnings and Cautions for Installation	04
	Cautions and Recommendations for Use	05
Product Components	Product Components / Remote Control Components	06
Names of Parts	Product / Display	07
	Remote Control	08
How to Use	Things to Know Before Use / Setting the Desired Humidity Level	09
	Dehumidify Mode / Auto Dehumidify Mode	10
	Scheduled Operation	11
How to Maintain	Filter Cleaning and Replacement Cycles /	12
	Filter Alerts and Alert Deactivation	
	Alerts for Filters and Deactivating Alerts	13
Product Specifications	Product Specifications / Product Dimensions	14
Customer Service Guide	Checks before A/S inquiry	15
	Check Notification Error Code / Defrosting Mode Details	17
	Product Warranty	19

Precautions Before Use

04

※ Before using the product, please familiarize yourself with the following information to ensure correct and safe operation.



Warnings for Installation

* Failure to follow the instructions below may result in personal injury.

01

This product is for use only in South Korea and must be connected to 220V~240V/50, 60Hz Hz power.

Using different power specifications may result in electric shock, product malfunction, or fire.

02

Be sure to install an earth leakage breaker and a dedicated switch.

It may cause fire or electric shock.

03

Only an authorized installation technician may install the product. In particular, electrical work must be performed solely by a certified professional.

It may cause explosion, fire, electric shock, or personal injury. Please contact the Customer Center

04

Connect the product to an outlet equipped with an earth leakage breaker rated at 220V~240V / 15 mA or less.

It may cause fire or electric shock.

05

Install the product securely on a location that can fully support its weight.

The product may fall and cause personal injury.

06

Do not install the product near electric heaters, heat sources, combustible gases, or flammable substances.

It may cause explosion or fire.

07

If you need to relocate or reinstall the product, please contact the Customer Center.

It may cause fire, short-circuiting, electric shock, or personal injury.

08

Only an authorized professional technician is permitted to disassemble, repair, or modify the product.

It may cause fire, short-circuiting, electric shock, or personal injury.



Cautions for Installation

* Failure to follow the instructions below may result in personal injury or property damage.

01

Disconnect the product from the power supply during bad weather, such as lightning, or when you do not plan to use it for an extended period.

It may cause fire or electric shock.

02

Do not install the product in a location where the temperature can fall below 0°C.

Condensation may form inside the product's main body or components, leading to electric shock or abnormal operation.

03

Ensure that the main body and grille are securely fastened.

The product may fall and cause personal injury.

04

When installing, repairing, or servicing the product, always disconnect the power. Also, do not reconnect the power until the product is fully assembled.

It may cause a short circuit or electric shock.

05

Do not install the product in locations that require continuous 24/7 air conditioning (such as machine rooms or computer rooms) or inside vehicles (such as campers) or ships.

The product may not be covered under warranty or may experience reliability issues.

06

Do not place the power cable near heat sources, pull it forcefully, or place heavy objects on top of the product.

It may cause fire or electric shock.

07

If the power cable is damaged, please contact the Customer Center for replacement.

it may cause fire or electric shock.

08

Always use genuine components and accessories during installation.

Product performance may deteriorate.

※ Before using the product, please familiarize yourself with the following information to ensure correct and safe operation.



Cautions for Use

* Failure to follow the instructions below may result in personal injury.

01

If moisture or foreign substances enter the electrical components inside the product, disconnect the power and contact the Service Center.

It may cause a short circuit or electric shock.

04

Do not use the product as a ventilation device for open-combustion appliances.

If you must use an open-combustion appliance such as a gas or oil heater, ensure that you have a separate ventilation system in place.

07

Always be cautious of children swallowing batteries.
Keep batteries out of their reach.

If a child swallows a battery, seek medical attention immediately.

10

Do not disassemble the product or open its grille cover while it is operating.

It may cause electric shock or personal injury.

02

If you detect abnormal sounds, odors, or smoke coming from the product, disconnect the power immediately and contact the Customer Center.

It may cause fire or electric shock.

05

Keep plastic packaging out of the reach of children or dispose of it immediately.

Children may place it over their heads, blocking their nose and mouth and causing suffocation.

08

The product must not be used by individuals with reduced physical or mental capabilities or insufficient experience or knowledge, including children.

They may be unable to use the product safely without supervision or guidance.

11

Use the product at temperatures between 18°C and 32°C.

Performance may deteriorate.

03

Before cleaning, replacing, or inspecting filters, disconnect the power and do not use an unstable stand or support.

It may cause fire, electric shock, or personal injury.

06

Do not apply excessive impact to the product or pull it with force.

It may cause fire, malfunction, or personal injury.

09

Do not block the air inlet or outlet with your finger or foreign objects.

It may cause malfunction or personal injury.

12

Do not tilt the product more than 45°.

It may cause performance degradation or malfunction.



Recommendations for Use

* Failure to follow the instructions below may result in personal injury or property damage.

01

Do not spray water directly onto the product. Also, do not clean the product using chemicals such as benzene, thinner, alcohol, or acetone.

It may cause fire, deformation, or discoloration.

04

Do not place objects near the air inlet or outlet.

It may cause malfunction or personal injury.

02

When replacing filters, do not bend them excessively.

The filter may be damaged or may not assemble correctly.

05

Before cleaning the product, disconnect the power and wait until the fan stops rotating completely.

It may cause malfunction or personal injury.

03

Do not wash filters with water. Replace them regularly.

Dust buildup may cause fire, performance degradation, or noise.

05

The remote control works best when it is within 5 m of the main body.

 
The effective distance may vary depending on the environment.

Product Components

06

※ Please check that all of the following components are included.

1 Product Components



Main Body



Grille



User Manual (1)



Drain Hose (1)



Seal Cover (Type I) (2)



Seal Cover (Type L) (1)



Cable Tie (1)

 


Adapter (1)



Grille-Fixing Screws (4)

2 Remote Control Components



Main Body



Holder



 
Lithium Battery
(CR 2025)

Names of Parts


07

※ The following shows the names of different parts of the product.

1 Product

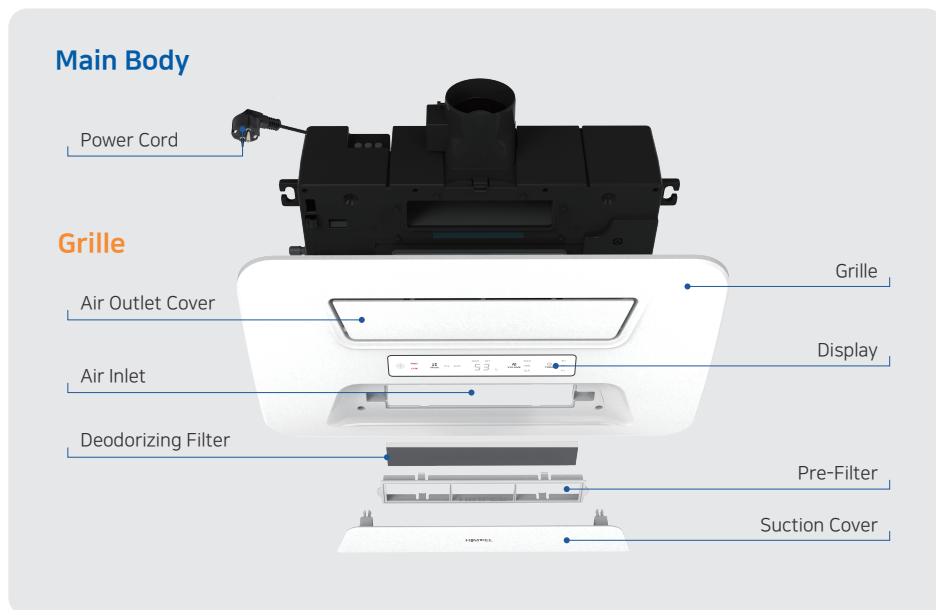


2 Display

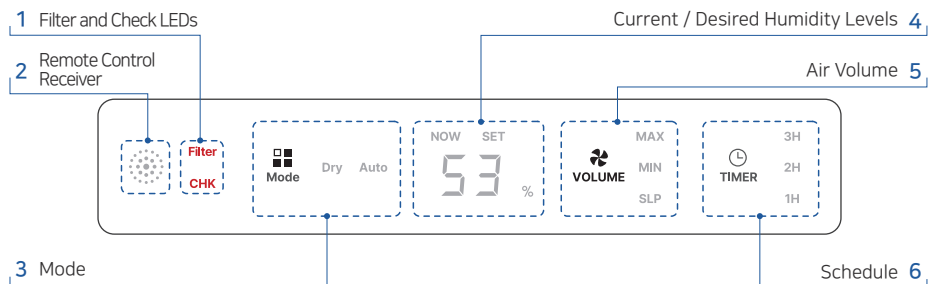 

※ The following shows the names of different parts of the product.

 3 Remote Control

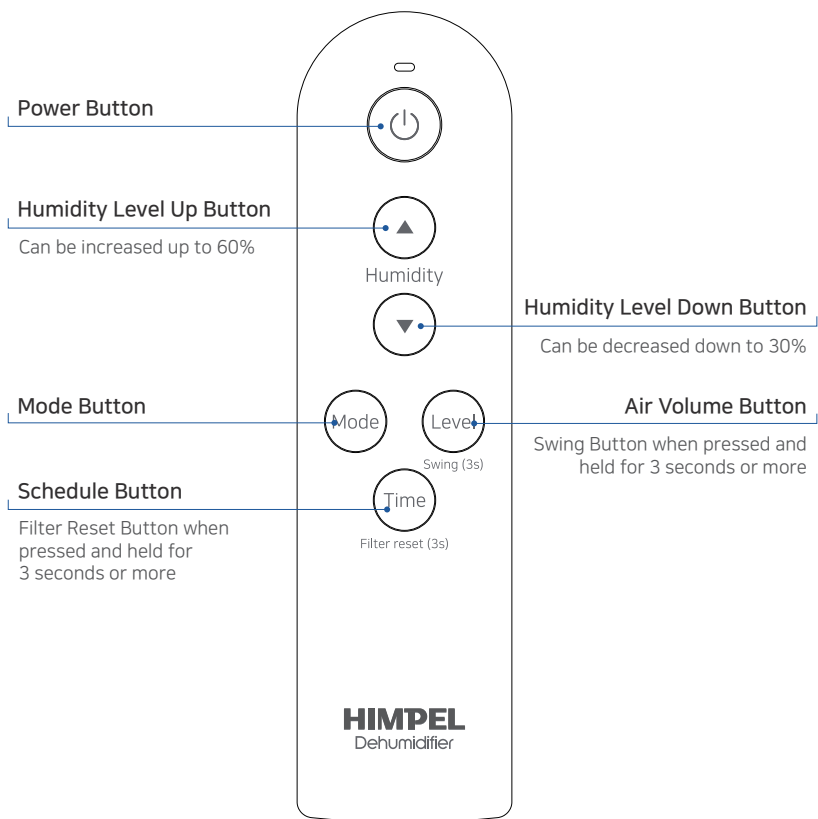


! Things to Know Before Use


- Before using the remote control, press the Power button to unlock it. When operating the remote control, point it toward the main body.
- The appropriate operating temperature for the device is 18°C to 32°C. If the device is used at room temperatures of 18°C or below, frost may form on the cooler, reducing dehumidification performance.
- For efficient dehumidification, the device may activate its compressor, which can increase the room temperature.
- To protect the device, the compressor does not operate for the first 3 minutes after the power is turned on. When the compressor starts after 3 minutes, it may produce loud noise temporarily. This noise decreases once the device stabilizes.
- When the desired humidity level is reached, the compressor stops and the fan continues to operate.
- If the internal temperature of the device drops below the appropriate operating range, frost may form inside the unit. When this occurs, the device automatically switches to Defrost Mode, during which it does not produce warm air.

Tip Setting the Desired Humidity Level

 
- The Current Humidity indicator displays humidity levels between 30% and 80%. If the current humidity is lower than 30%, the indicator shows **L** , if it is higher than 80%, it shows **H** .

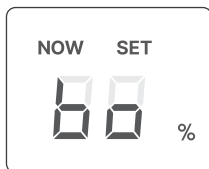

[Current Humidity]

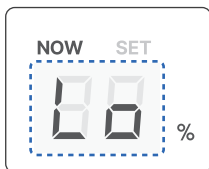 


[Humidity Less Than 30%]

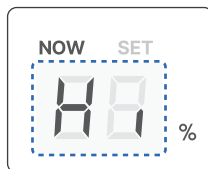 

[Humidity Higher Than 80%]

 - During rainy seasons or the dry winter season, you can set a desired humidity level to control the room's humidity.
- Press the Desired Humidity buttons (▲) , (▼) on the remote control to set your preferred humidity level.
- You can set the desired humidity between 30% and 60%. When pressing the Desired Humidity buttons, the Desired Humidity LED turns on. Each press of the Desired Humidity buttons increases or decreases the setting by 5%, depending on the button you press.

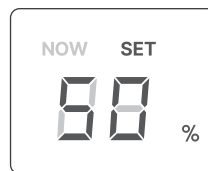


[Desired Humidity Level Display]

1 Dehumidify Mode / Auto Dehumidify Mode

These modes are used to lower the humidity in the room.

1. Press the  button on the remote control to operate the device in Dehumidify Mode.

 
- 1) When Dehumidify Mode is activated, the device operates at Standard air volume.
- 2) You can press  button repeatedly on the remote control to switch between Standard, Fast, and Sleep.
- 3) You can press and hold  button for 3 seconds or more to activate Swing Mode.
- Press and hold the button again for 3 seconds or more to stop Swing Mode.
- 4) Press the Desired Humidity buttons ,  on the remote control to set the desired humidity level.

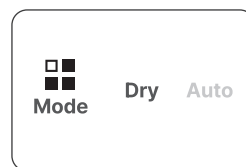

[Dehumidify Mode Display]

2. Press  button on the remote control to operate the device in Auto Dehumidify Mode.

 - 1)  is displayed to the right of  on the display.
- 2) Auto Dehumidify Mode automatically adjusts the air volume based on the humidity level and maintains the humidity at below 50%.

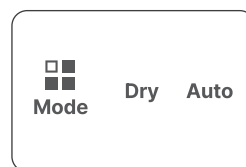

[Auto Dehumidify Mode Display]

• Operating Mode by Current Humidity Level

Humidity	Less than 50%	More than 50%	More than 80%
Air Volume	Sleep	Standard	Fast

 
※ You cannot set the desired humidity level or air volume in Auto Mode.

3 Scheduled Operation

You can use the device's Timer function to operate it for a specific duration.

1. Press  button on the remote control to set the timer.

1) Press  button repeatedly to select the desired operating duration (1 Hour, 2 Hours, or 3 Hours).

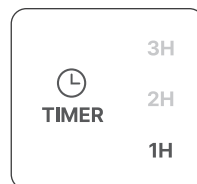

[Schedule Display]

※ Scheduled Operation is available only in Dehumidify Mode, and the device will stop automatically after the selected duration.

※ Auto Dehumidify mode operate based on sensor readings. Therefore, Scheduled Operation cannot be used in these modes.

※ Before cleaning the device, make sure the power is turned off.
(It may cause electric shock or personal injury.)

! Filter Cleaning and Replacement Cycles

* The cleaning and replacement cycles may vary depending on the environment and how the device is maintained.

Category	Cleaning Cycle	Replacement Cycle
Pre-Filter	Approx. every 1,000 hours (about every 1.5 months)	-
Deodorizing Filter	-	Approx. every 4,000 hours of operation

! Filter Alerts and Alert Deactivation

- When it is time to clean or replace the filters, the Filter LED on the display will flicker to notify you.

After cleaning or replacing the filters, press and hold the Schedule button on the remote control for 3 seconds or more to deactivate the alert.

 


※ It is recommended to clean and replace filters regularly. Otherwise, performance may deteriorate.

※ Before cleaning the device, make sure the power is turned off. Otherwise, it may cause electric shock or personal injury.


! Detaching the Grille

1

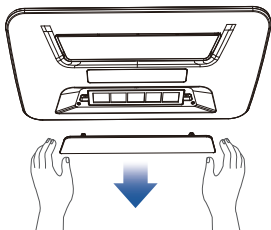

Pull the suction cover down as shown in the figure to detach it.

 
2

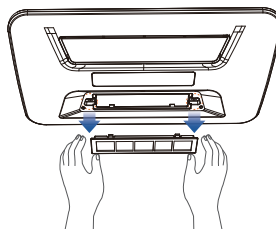

Hold the left and right handles of the pre-filter and pull down the filter to separate it.

! Cleaning the Pre-Filter

 1

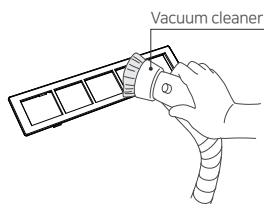


Separate the deodorizing filter from the pre-filter and remove the dust on the pre-filter with a vacuum cleaner.

2



Submerge the filter under warm water containing neutral detergent and wipe the filter net lightly to clean it.

 3

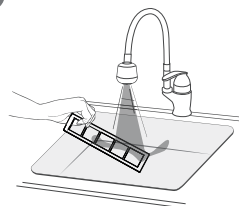

Rinse the filter with clean water and dry it under the shade before re-assembling the filter.

* Do not bend the filter forcefully. (It may damage the filter or result in faulty assembly.)

Product Specifications

14

※ Product specifications and functions may be subject to change without notice to improve product quality.

1 Product Specifications

Model Name		DHV-5PCCU
Power		AC 220V~240V / 50Hz, 60Hz
Power Consumption (W)		149
Noise (dB)		50 dB or less
Dehumidifying Method		Inverter compressor
Dehumidifying Capacity (L/day)		5.4
Filter		Pre-filter + deodorizing filter
Drainage		Auto drainage system (buried piping)
Dimensions (mm)	Grille	620(W) X 400(D) X 30(H)
	Main Body	510(W) X 290(D) X 148(H)
Weight (kg)		10
Supported Room Size(m)		22㎡

 
※ Supported Room Size is a standard set by our company to assist user understanding.

The actual applicable size may vary depending on installation conditions, such as areas used by large numbers of people.

※ Product images, specifications, and functions may vary depending on installation conditions or may change to improve product quality.

2 Product Dimensions

(Unit: mm)

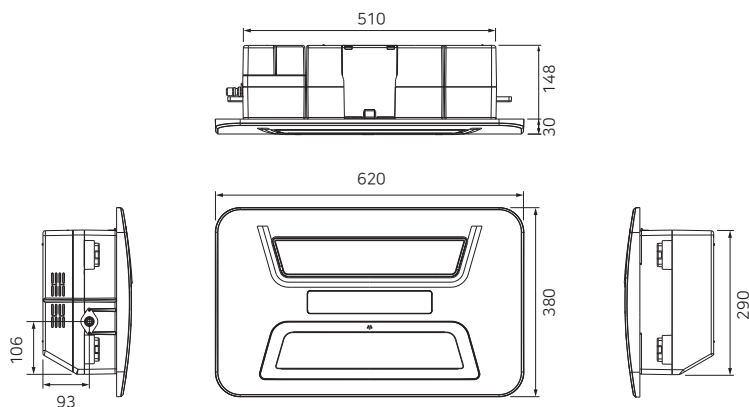

※ If the device has a problem, please check the following before contacting the Customer Center.

Things to Check Before Requesting Service

Q. The device does not operate.

A. For the device to operate, it must be connected to a power outlet.
Please check whether the power cord is properly plugged into the outlet.

Q. The device does not dehumidify.

- A.**
- 1) Product performance may decrease if the filters are not cleaned or replaced properly.
Clean and replace the filters regularly, especially when a filter alert is displayed.
 - 2) Performance may also deteriorate if the filters are not reassembled correctly after cleaning or replacement.
Ensure the filters are installed properly.
 - 3) Dehumidifying performance decreases when the room temperature is below 18°C.
The device performs best when used in environments between 18°C and 32°C.
 - 4) The compressor begins operating 3 minutes after the device is turned on to protect internal components.
Please wait for 3 minutes until the device stabilizes.
 - 5) Dehumidifying performance decreases if the desired humidity is set higher than the current humidity.
Set the desired humidity lower than the current humidity, or increase the air speed.
 - 6) If room windows are open, humidity may not decrease as quickly, even when using Dehumidify Mode.
**Close the windows while using the dehumidifier.
You may open them to ventilate the room after use.**

※ If the device has a problem, please check the following before contacting the Customer Center.

! Things to Check Before Requesting Service

Q. The device makes abnormal noise.

A. 1) If the filters are not cleaned or replaced regularly, or if they are not assembled correctly, the device may produce noise.

Please clean and replace the filters regularly and ensure they are assembled correctly after cleaning or replacement.

2) While the device is operating or immediately after it stops, it may produce a noise similar to running water.

This is the sound of refrigerant flowing inside the unit or water being drained. This is not a malfunction.

3) The device may produce noise when it first starts operating or while its internal components are stabilizing.

This is not a malfunction. The noise will decrease as the components stabilize, so please wait with peace of mind.

4) If the device is tilted more than 45°, it may produce noise.

This is not a malfunction. Operate the device again after approximately 1 hour.

Q. I cannot change the air speed.

A. In Auto mode, the device operates automatically according to sensor values. Therefore, you cannot change the air speed in this mode.

To adjust the air speed, first deactivate Auto mode.

Q. The device blows warm air from the air outlet.

A. This device is a dehumidifier that removes moisture from the air, so it is normal for it to produce warm air.

It removes moisture by cooling the air, using the same principle as an air conditioner. As a result, it releases warm air just like the outdoor unit of an air conditioner. Therefore, it is normal for warm air to be blown out while the device is operating in Dehumidify or Auto Dehumidify mode.

Q. The Check LED turns on.

 
A. If the device detects a problem, the Check LED will turn on and the corresponding error code will be displayed.

Please check the error code and contact the Customer Center.

※ If the device has a problem, please check the following before contacting the Customer Center.

! Check LED and Error Codes

- When the product has a problem, the Check LED turns on and the corresponding error code is displayed.

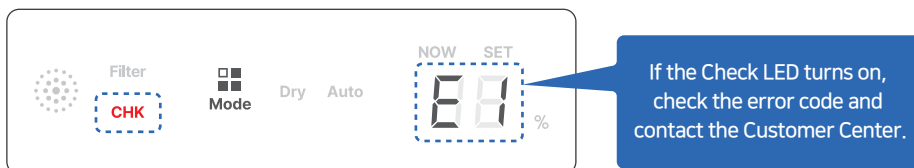

Category	Humidity Sensor	Temperature Sensor	Water Level Sensor	Compressor	Fan (Motor)
Error Code	E1	E2	E4	E6	E7

! Defrost Mode

- When the internal temperature of the device falls below the proper operating range during Dehumidify mode, frost may form inside the unit. Defrost Mode removes this frost.
 - While Defrost Mode is operating, the device's compressor stops, and warm air is not produced. Once the frost has been removed, the device automatically resumes Dehumidify mode.
 - When the room temperature falls below 16°C, the device automatically enters Defrost Mode.
 - If the room temperature falls below 5°C, the intervals between Defrost Mode cycles may become shorter.
 - When Defrost Mode is active, the display shows 'dF'.



[Defrost Mode]

! Overheat Prevention Mode

- When the internal temperature of the device rises above the proper operating range during Dehumidify mode, the internal components may become damaged. To prevent this, Overheat Prevention Mode lowers the internal temperature.
 - While Overheat Prevention Mode operates, the device's compressor stops, and the device operates at Fast air speed. Once the temperature decreases sufficiently, the device automatically returns to Dehumidify mode.
 - When the room temperature exceeds 33°C, the device automatically enters Overheat Prevention Mode.
 - The display does not change when Overheat Prevention Mode is active.

MEMO

Handwriting practice lines consisting of 24 horizontal dotted lines.

HIMPEL

Product Warranty

Himpel Co., Ltd. provides warranty service for this product as described below, in accordance with the Consumer Compensation Regulations. When a service request is received, a Himpel service technician or authorized dealer will provide the necessary service. Himpel will notify the customer of their eligibility for compensation and the compensation details within 7 days of the request, and will provide the compensation within 14 days of the notification.



The product warranty period is one year.

(Spare components are retained for 5 years.)



Product Name :

Model :

Purchase Date

Sales Price

Place of Purchase

※ This product warranty is valid only in South Korea and will not be reissued.
Please store the warranty together with the user manual in a safe place.

Product Service

If a malfunction occurs while using the product, you have the right to receive free service for one year from the date of installation. However, you are not eligible for free service, even during the warranty period, if the malfunction is due to customer negligence or events of force majeure.

1. Technology fees refer to costs incurred when a service technician diagnoses, repairs, replaces, or adjusts faulty parts, or inspects product condition after repair.
2. Parts fees refer to the cost of components and additional materials used for the repair.
3. Travel fees refer to costs incurred when a service technician visits the product location at the customer's request.

Free Repair Service

During the warranty period, you are entitled to free repair or replacement for defects in the product itself, except for failures caused by mishandling or improper operation.

Cases covered under the product warranty include:

1. Excessive noise caused by an unbalanced fan or other abnormal conditions
2. Situations where the expected behavior of certain control modes does not match the actual operating conditions
3. Cases where power is supplied normally but the fan does not operate

Paid Repair Service

The following cases may incur charges even during the warranty period:

1. Unauthorized disassembly or reassembly by the customer causing product malfunction
2. Product damage caused by incorrect wiring
3. Regular inspection or maintenance requested by the customer
4. Replacement of the grille

HIMPEL



HIMPEL Co., Ltd.

A. 5 Annyeongnam-ro, Annyeong-dong, Hwaseong-si, Gyeonggi-do, South Korea
sales@himpel.com

※ Product specifications and functions may be subject to change without notice to improve product quality.